Quinny®

01474C
User Guide
Mode d'emploi

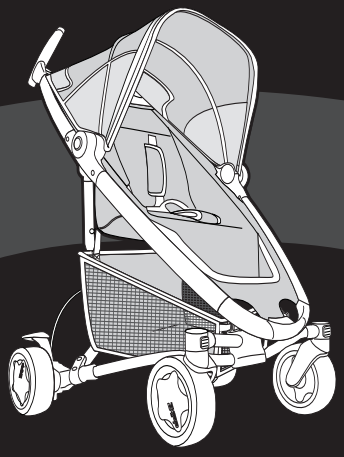

ZAPP™

French Guide Included
Mode d'emploi en français inclus

www.quinny.com

Warnings	1
Parts List	2
Assembly	3-4
To Use	5-8
Care and Maintenance	9
Replaceable Parts	9
Warranty	9

⚠ WARNING

FOR THE SAFETY OF YOUR CHILD, PLEASE READ THE FOLLOWING WARNINGS AND ASSEMBLY INSTRUCTIONS AND KEEP FOR FUTURE REFERENCE.

- Adult assembly required. **CAUTION:** Keep small parts away from children during assembly.
- **NEVER LEAVE CHILD UNATTENDED. ALWAYS** keep child in view when in stroller.
- **AVOID SERIOUS INJURY** from falling or sliding out. **ALWAYS** use seat belt. Check frequently to make sure it is secure.
- **ALWAYS** keep fingers away from moving parts, when folding, unfolding or adjusting stroller to prevent finger entrapment.
- **ALWAYS** make sure stroller is **FULLY OPEN AND LOCKED** before using.
- **ALWAYS** use the brakes when stroller is stopped.
- **ALWAYS** remove protective material and poly bags and dispose before assembly.
- **NEVER** use stroller on stairs or escalators.
- **NEVER** allow children to play with or hang onto the stroller.
- **NEVER** allow children to climb into the stroller unassisted. Stroller may tip over and injure child.
- **NEVER** place or hang parcels, bags or accessories on the handle or canopy. The stroller may tip over or the canopy may collapse.
- This product will become unstable if a parcel bag or rack is used when there is no provision for one.
- This product may become unstable if a parcel bag, other than the one recommended by the manufacturer is used.
- This product will become unstable if the manufacturer's recommended load is exceeded.
- **DO NOT** carry additional children, goods or accessories in or on this product except as recommended in the manufacturer's instructions.
- **NEVER** place more than 5-LBS. (2.27-kg) in the storage basket. If weight is exceeded, hazardous unstable conditions may exist.
- **STROLLER** is only for use with children up to 40-LBS. (18.2-kg), and **WHEN SEATED,** the midpoint of the child's head is at or below the top of the stroller seat.
- **ONLY** use this stroller with **ONE** child at a time.
- STROLLER is for use with children who can sit up unassisted, and is **NOT** recommended for newborns.

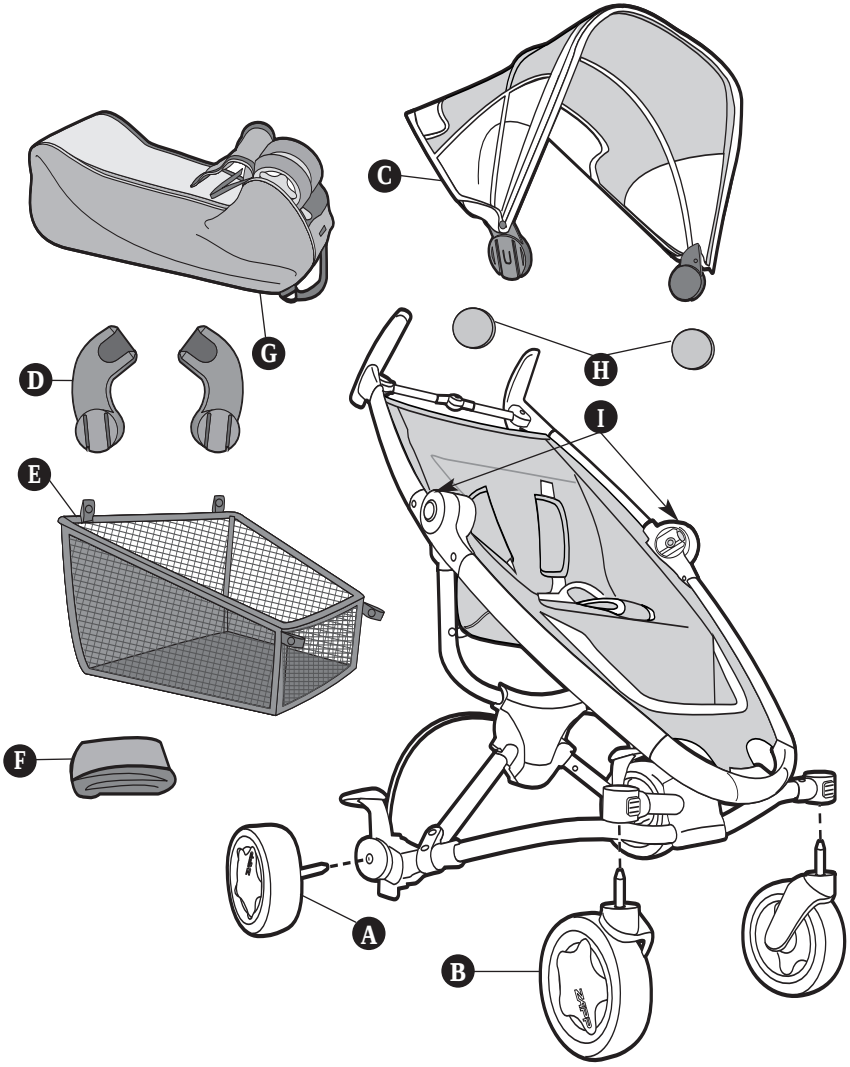

- **A** Rear wheels (2)
- **B** Front wheels (2)
- **C** Canopy
- **D** Car seat adapters (2)
- **E** Shopping basket
- **F** Rain cover
- **G** Storage bag
- **H** Hinge covers (2)
- **I** Hinge points

- Mico™ car seat sold separately.
- Lay out and identify all parts.
- Do not return this product to the place of purchase. If any parts are missing, call Consumer Relations at (800) 951-4113. Or visit our website at www.quinny.com.
- Include the model number and manufacture date (found on the back of the stroller) and a brief description of the part.
- Keep these instructions for future use.

NOTE: If wheels begin to squeak, spray lubricant to the axles.

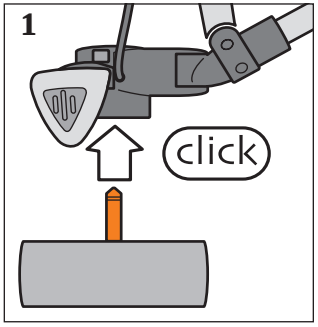

1 Install Rear Wheels

Insert the rear wheel axle into the frame until you hear a "click" **(Figure 1)**. Repeat for other rear wheel. Pull to confirm it is assembled securely.

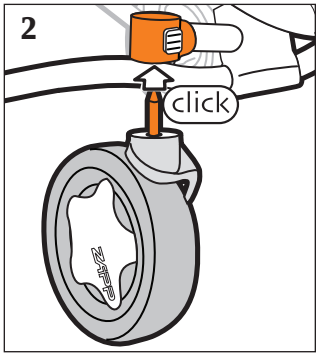

2 Install Front Wheels

Position front wheel with logo facing outward. Insert front wheel into the tube of the frame until you hear "click" **(Figure 2)**. Repeat for other front wheel. Pull to confirm it is assembled securely.

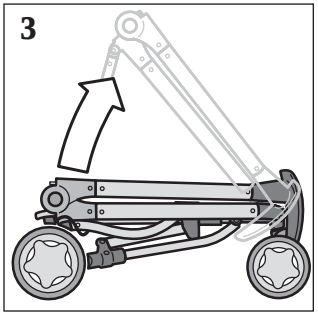

3 Unfold Stroller

Gently lift the stroller by the hinge points. The frame will start to unfold itself **(Figure 3)**.

Pull the rear hinge (labeled 3) outward until you hear a "click" **(Figure 3a)**.

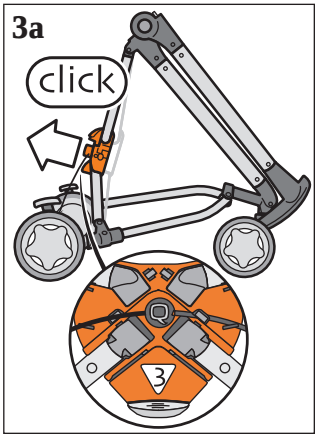

Press release button 1 **(Figure 3b)**. The button will stay pressed by itself.

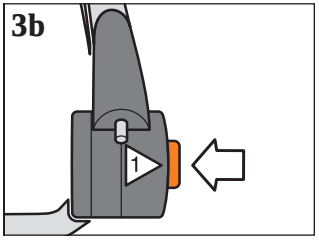

Press release button 2, while at the same time raising the upper section of the stroller **(Figure 3c)**. Release button 2 and lift up further until you hear a "click."

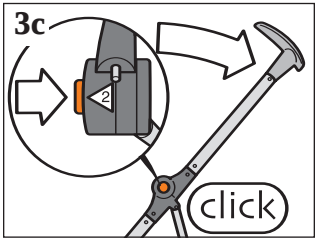

Extend the handle crossbar into the horizontal position until you hear a "click" **(Figure 3d)**.

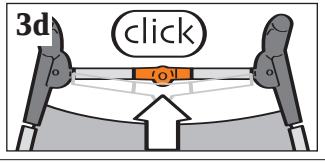

4 Parking Brake

Always use the parking brake, even when standing still for only a few moments! Push down on the red pedal (P) behind the rear wheel to set the parking brake **(Figure 4)**. Push the opposite pedal to release the parking brake.

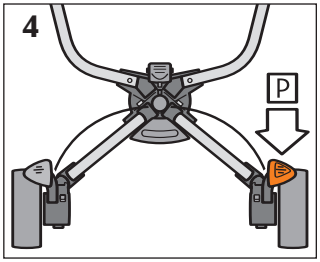

5 Attach Shopping Basket

Locate two loops in the area under the footrest. Put strap end through loop and secure snap **(Figure 5a)**.

Locate one ring above each rear wheel. Put strap end through each ring and secure snap **(Figure 5b)**.

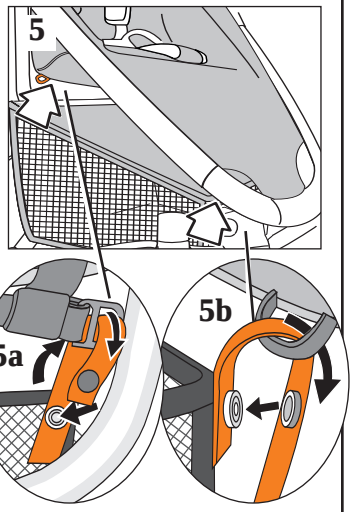

6 Canopy

Slide off the hinge covers from the hinge points and store them for future use **(Figure 6)**.

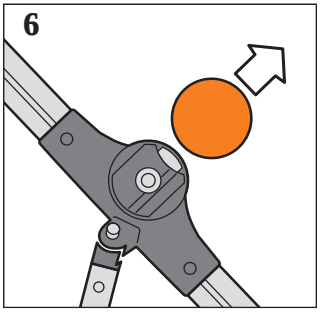

Slide both ends of the canopy into the hinge points until they are securely in place **(Figure 6a)**.

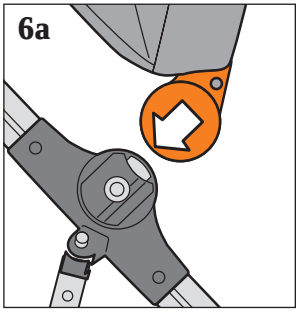

Fasten the canopy to the top of the stroller using the snaps and adhesive patches **(Figure 6b)**. Check to make sure the canopy is fastened securely.

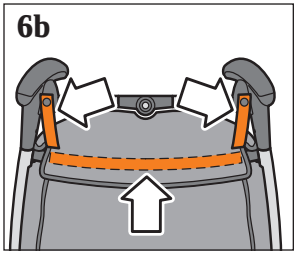

The canopy can be adjusted to two different positions: folded out or folded back **(Figure 6c)**.

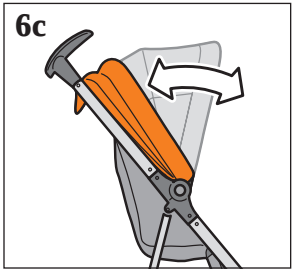

To remove the canopy: Unfasten the snaps and adhesive patches and pull the canopy out of the hinge points. Slide the hinge covers onto the hinge points **(Figure 6d)**.

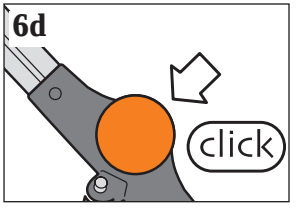

⚠ CAUTION

When removing canopy, always slide hinge covers back on the hinge points.

7 Swivel Wheel

TIP: Lock the swivel wheel when using the stroller in a straight direction for a long period.

To lock, push the swivel wheel lock downward and turn the front wheel into the backward position until you hear a "click" **(Figure 7)**.

To unlock, push the swivel wheel lock upward.

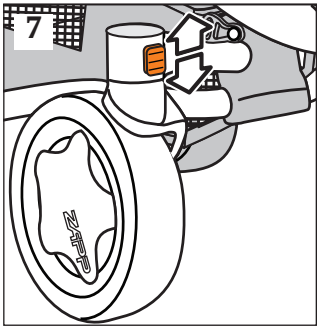

8 Removing Seat

It is necessary to remove the seat from the frame when preparing to use the car seat adapters.

Unzip seat zipper at the back of the seat **(Figure 8)**.

To unclip the seat from the frame, (Figure 8a) fold stroller enough to relieve the tension on the clips. See steps 13a-13d.

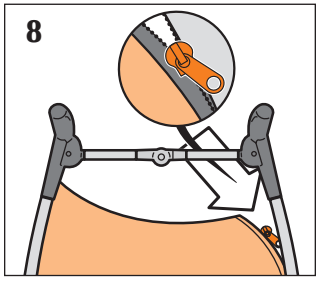

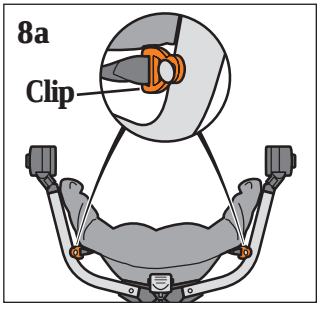

⚠ WARNING – SUFFOCATION HAZARD

- Be sure rain shield doesn't cover the child's face.

9 Rain Cover

Place the rain cover over the canopy and secure adhesive straps around the handles. Hook it under the footrest **(Figure 9)**.

⚠ WARNING

To avoid serious injury:

- Use **ONLY** Mico™ infant car seat (not included) with this stroller (model 01474C).
- Please refer to the manufacturer's instructions for the use of your infant car seat.
- **ALWAYS** install car seat facing to the rear of the stroller.
- **ALWAYS** use the restraint system in the car seat.

10 Install Infant Car Seat

Remove the seat. Push the parking brake pedal down.

Insert left and right car seat adapters into hinge points until you hear a "click" **(Figure 10)**.

Car seat must be in rear-facing position.

Lower car seat into car seat adapters until both sides "click" **(Figure 10a)**.

To remove car seat, press both buttons on car seat **(Figure 10b)**. Lift car seat up.

To remove car seat adapters, press gray button and slide adapter off hinge points **(Figure 10c)**.

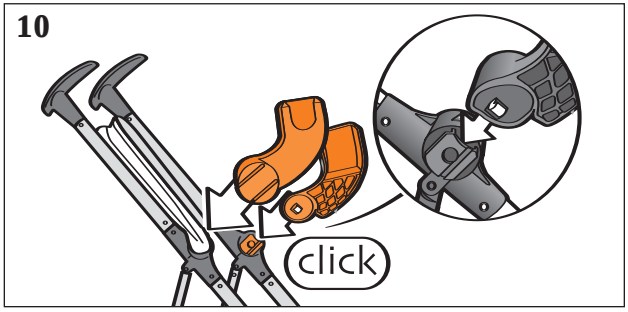

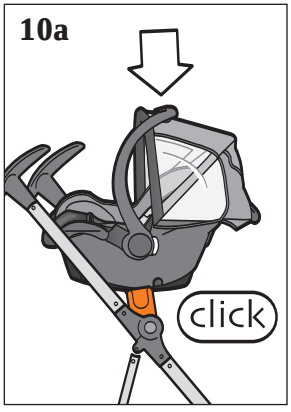

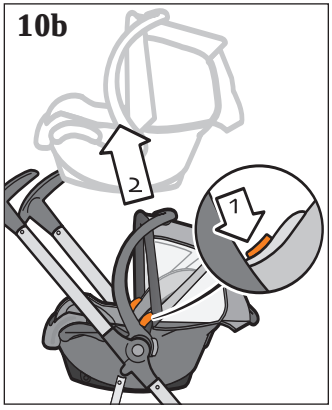

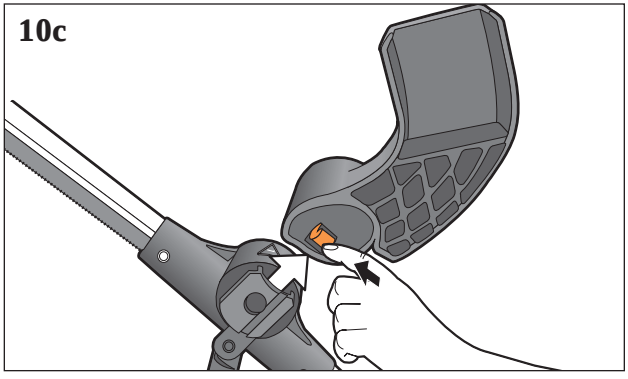

⚠WARNING

- **NEVER LEAVE CHILD UNATTENDED.**
- **AVOID SERIOUS INJURY** from falling or sliding out. Always use seat belt. Check frequently to make sure it is secure. Belts must be threaded exactly as shown.
- Failure to follow these instructions could result in the serious injury or death of your child.

11 To Use Restraint System

Place your child in the stroller, with the crotch strap between the child's legs. Fit clips together. Slide clips into buckle until you hear a "click" **(Figure 11)**. Tighten straps snugly around your child **(Figure 11a)**.

To tighten strap, slide buckles down **(Figure 11b)**.

To loosen strap, slide buckles up **(Figure 11b)**.

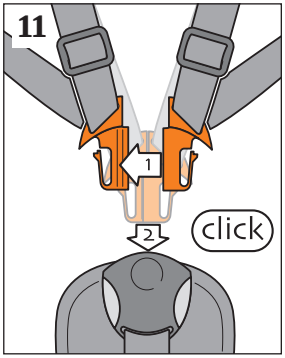

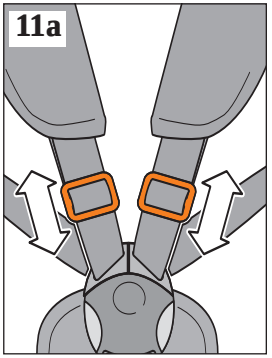

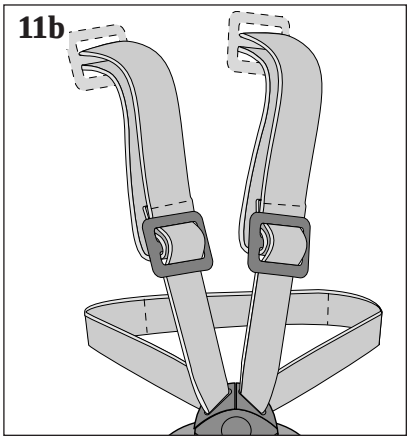

12 Adjust Restraint Height

The shoulder straps have two height positions for your growing child. Push each anchor through the seat back and into the desired slot **(Figure 12)**. Be sure the anchor lays flat against the seat back.

⚠WARNING

- For proper installation of the restraint system, make sure both anchors lay flat against the back board.
- NEVER use stroller without BOTH restraint and crotch straps.

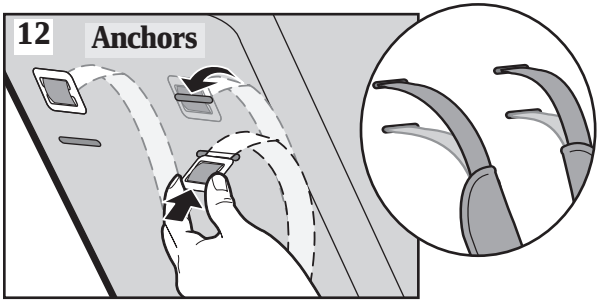

13 Fold Stroller

NOTE: It is not necessary to remove canopy before folding.

Close canopy **(Figure 13)**.

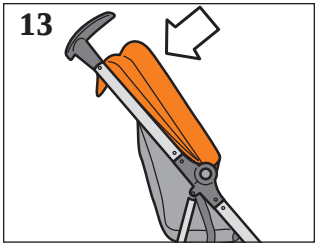

Stand behind the stroller and push release button 1 **(Figure 13a)**. The button will stay pressed by itself.

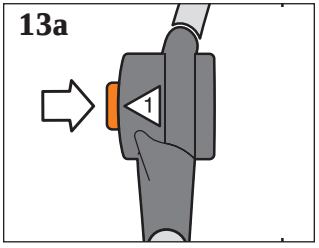

Push release button 2 while at the same time pushing the upper frame forward **(Figure 13b)**.

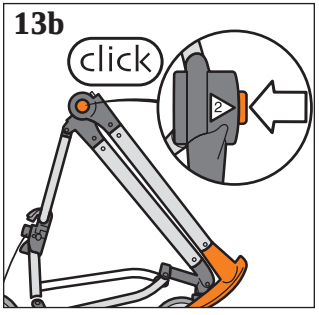

Ensure that the handle crossbar is folded inward **(Figure 13c)**.

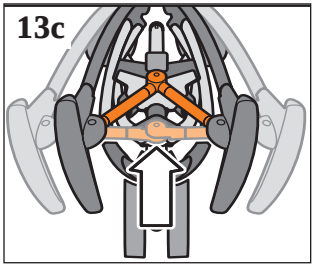

Hold onto stroller by hinge point. Apply parking brake.

1. Press down release pedal.
2. Pull rear hinge rearward slightly.
3. Then push rear hinge forward to fold stroller **(Figure 13d)**.

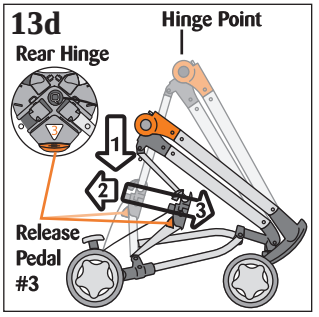

If necessary, push down further on the frame with your hands to make it more compact. Place it inside transport bag **(Figure 13e)**. Front wheels go toward the carry strap.

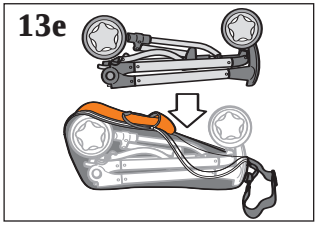

NOTE: To make the stroller more compact, you may remove the wheels.

14 Removing the Wheels

Press the release button and pull the rear wheel out of the frame **(Figure 14)**.

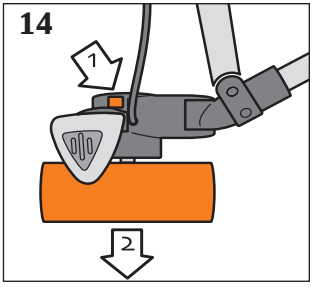

Press the release button on the bottom of each front wheel and pull wheel off of the frame **(Figure 14a)**.

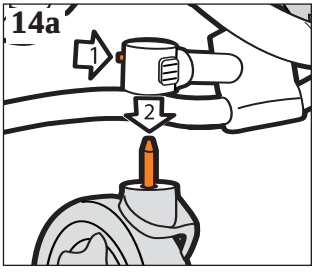

Care and Maintenance

- Spot clean pad with cold water and mild soap. Air dry.
- Periodically check for loose screws, worn parts, torn material or loose stitching. Tighten or replace parts as needed.

Replaceable Parts

- Front wheel assembly
- Rear wheels
- Seat
- Rain cover
- Car seat adapters
- Shopping basket

- To order parts call (800) 951-4113.
- Include the model number and manufacture date (found on the stroller) and a brief description of the part.

One-Year Limited Warranty

Dorel Juvenile Group, Inc. warrants to the original purchaser that this product (Zapp™ Stroller), is free from material and workmanship defects when used under normal conditions for a period of one (1) year from the date of purchase. Should the product contain defects in material or workmanship Dorel Juvenile Group, Inc., will repair or replace the product, at our option, free of charge. Purchaser will be responsible for all costs associated with packaging and shipping the product to Dorel Juvenile Group Consumer Relations Department at the address noted on the front of this document and all other freight or insurance costs associated with the return. Dorel Juvenile Group will bear the cost of shipping the repaired or replaced product to the purchaser. Product should be returned in its original package accompanied by a proof of purchase, either a sales receipt or other proof that the product is within the warranty period. This warranty is void if the owner repairs or modifies the product or the product has been damaged as a result of misuse.

This warranty excludes any liability other than that expressly stated previously, including but not limited to, any incidental or inconsequential damages.